


PLASTERERS ACCESSORIES

FEATURE BEADS

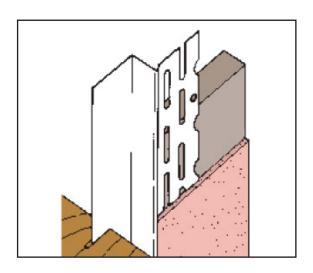

Neat shadow lines and recesses can be formed around door frames, abutments and the like.